


Instructions for Clock Setting

1. Type: KH006

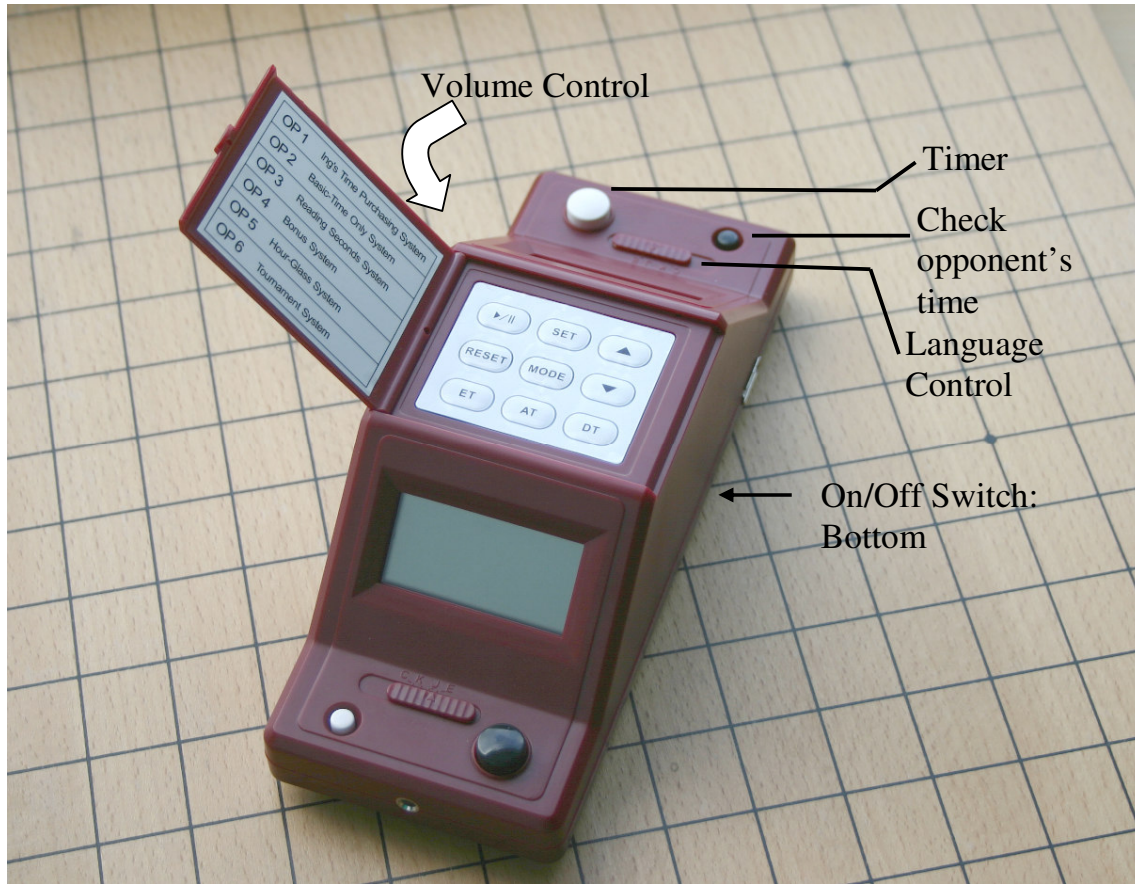

Step by Step Instructions for Setting Time


1. Turn clock on (switch on the bottom)
2. Set language controls to E for English (rightmost setting) on both sides
3. Set volume control in the middle (*not* to minimum: at minimum, the byo-yomi signal is not audible!)
4. The display shows “OP” plus a number
5. Use the Up/Down arrows to set to OP 3
6. Press Mode
7. The Basic Time for Black is now shown in the display.
(The black circle top left indicates that this is Black's time)
8. Press Set
9. The hours can now be adjusted. Use the Up/Down arrows to set the hours
10. Press Mode
11. The minutes can now be adjusted. Use the Up/Down arrows to set the minutes
12. Press Mode

13. Now the Basic Time for White is shown in the display. It is automatically set to the same Basic Time as for Black.
(The white circle bottom left indicates that this is White's time)
14. Press Mode
15. The Byo-yomi for both players is now shown in the display, on the left the nr of seconds, on the right the nr of byo-yomi periods
16. Press Set
17. The nr of seconds Byo-yomi can now be adjusted. Use the Up/Down arrows to set the number of seconds.
18. Press Mode
19. The nr of Byo-yomi periods can now be adjusted. Use the Up/Down arrows to set the number of periods to 1.
20. Press Mode
21. Press the Play/Pause button to return to game mode.
22. The clock is now ready for use. The clock starts when white presses his/her button (the large white button)
23. The Play/Pause button can be used to pause the clock during play.

General Remarks

- The Mode button generally functions as 'Enter/Confirm' button.
- The Up/Down arrows are used to adjust time or to navigate menu options.
- The Set button is used to select the part of time you want to adjust.
- The Play/Pause button is used to start/pause play.
- **Holding the Up/Down arrow keys down increases the numbers faster, and without beeps.**
- Do not use the Reset, ET, AT and DT buttons.
- To restart the time setting process, simply turn clock off and then on again.

2. Type: IK-02

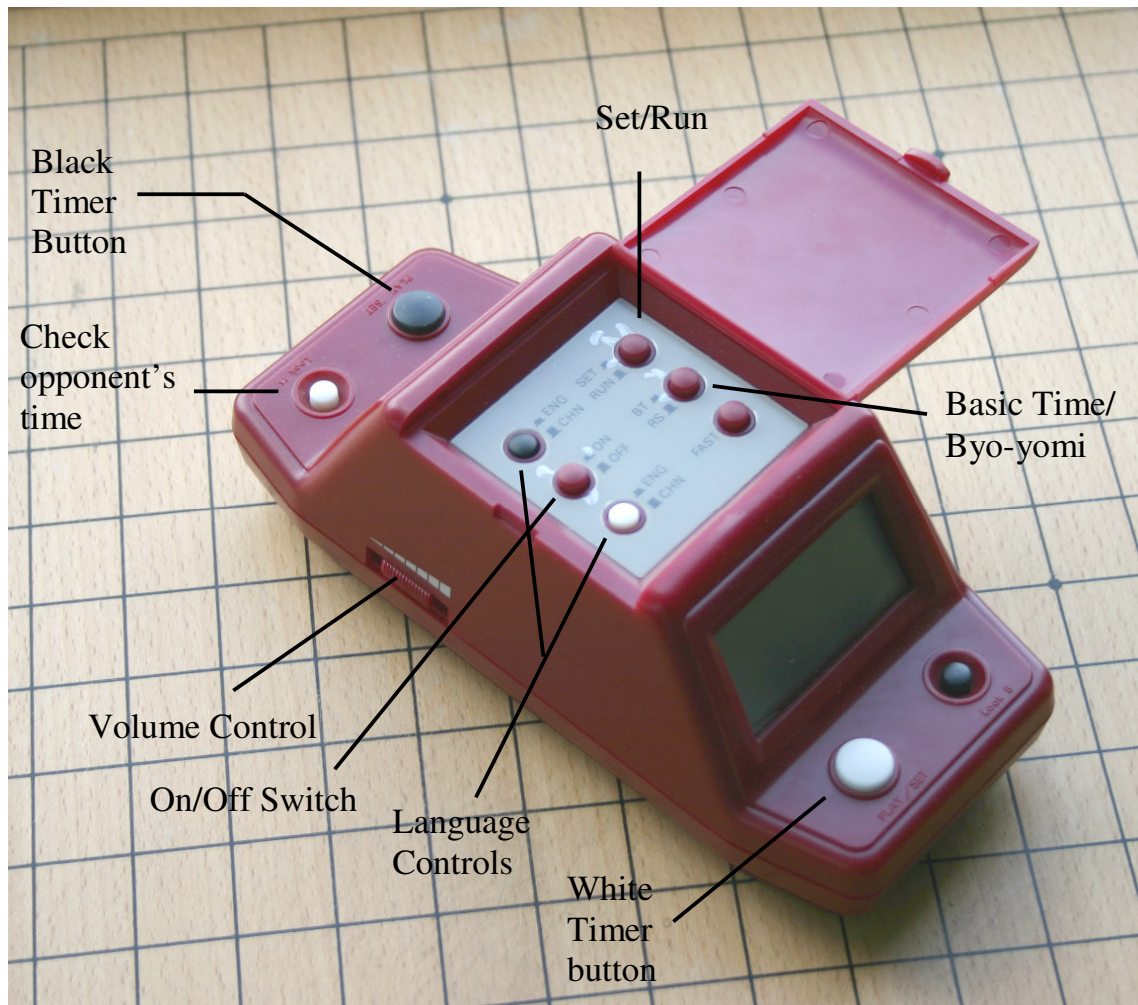

Step by Step Instructions for Setting Time

1. Turn clock on (switch on top, middle left)
2. Set language controls to E for English for both black and white (set the left top and left bottom buttons in 'down' position)
3. Set volume control to the minimum
4. Put the Set/Run button in 'down' position
5. Put the Basic Time/Byo-yomi button in 'down' position
6. The basic time can now be set
(basic time is set for both players at the same time)
7. Use the Black Timer button to adjust the hours
8. Use the White Timer button to adjust the minutes
9. Put the Basic Time/Byo-yomi button in 'up' position
10. Use the Black Timer button to set the number before the ':' to 1
(this is the number of byo-yomi periods)

11. Use the White Timer button to set the number after the ':' to the desired nr of seconds Byo-yomi
Note: to set 60 seconds Byo-yomi, set the number of seconds Byo-yomi to '00'
12. Put the Set/Run button in 'up' position
13. The clock is now ready for use. The clock starts when the White Timer button is pressed
14. The Set/Run button can be used to pause the clock during play

General Remarks

- **Holding the Black/White Timer button down increases the numbers faster, and without beeps.**
- Do not use the Fast button on top.
- To restart the time setting process, simply turn clock off and then on again.
- Low Battery is indicated by the appearance of 'BATT' in the display.